


PREPARED OPENING, REFER TO OMD 0.0.07 AND 0.0.08 FOR PREPARATION OF OPENING PRIOR TO FLASHING APPLICATION


STEP #1

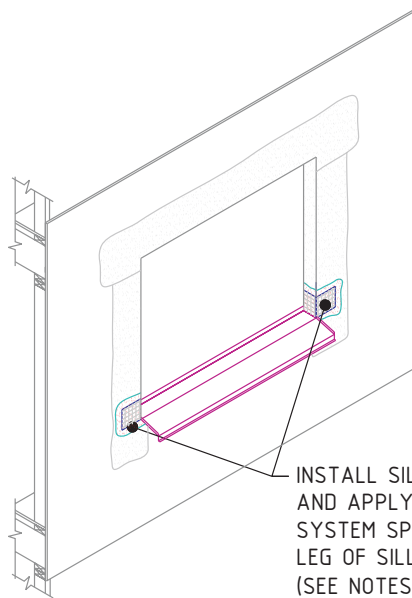

INSTALL SILL PAN FLASHING AND APPLY DRYVIT AQUAFLASH SYSTEM SPLICES LAPPING OVER LEG OF SILL PAN FLASHING. (SEE NOTES 1 AND 2)

STEP #2

REFER TO OMD 0.0.11 FOR JAMB DETAIL

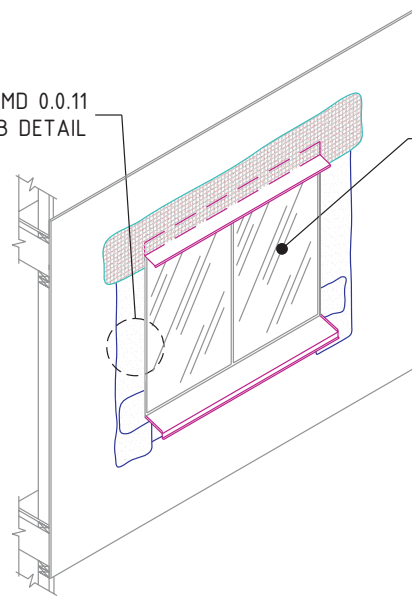

INSTALL WINDOW UNIT AND ASSOCIATED FLASHINGS AND APPLY DRYVIT AQUAFLASH® SYSTEM OVER VERTICAL LEG OF HEAD FLASHING (SEE NOTES 1 AND 2)

STEP #3

Outsulation® MD System®

Opening Flashing Integration

NOTE:

1. REFER TO OMD 0.0.10 FOR INTEGRATION OF FLASHING.
2. DRYVIT FLASHING TAPE SURFACE CONDITIONER™ AND DRYVIT FLASHING TAPE™ MAY BE USED IN LIEU OF AQUAFLASH SYSTEM OR BACKSTOP NT-TEXTURE OVER GRID TAPE.

The architecture, engineering and design of the project using the Dryvit products is the responsibility of the project's design professional. All systems must comply with local building codes and standards. This detail is for general information and guidance only and Dryvit specifically disclaims any liability for the use of this detail and for the architecture, design, engineering or workmanship of any project. The project design professional determines, in its sole discretion, whether this detail or a functionally equivalent alternative is best suited for the project. Use of a functionally equivalent detail does not violate Dryvit's warranty. This detail is subject to change without notice. Contact Dryvit to insure you have the most recent version.

APPROVED BY:	REV:	DATE:
RS	1	09/06

